









USER FUNCTIONS

User Access

Ready To Arm			
Program the system	1	2	3
Enter Code:	4	5	6
	7	8	9
Cancel	Clear	0	←

5000-100-009-V0

2. Enter your 4-digit Master User Code. The system displays the Master User programming screen.

Ready To Arm			
 Users	 Events	 Test	 Keypad
 Date Time	 Reminders	 Slide Show	 WiFi Config
			Back

5100-100-006-V0

3. Select the "Users" icon. The system displays the Master User screen.

Ready To Arm		
Master ****	Babysitter ****	↶
Duress ****		▲
		▼
Edit	Add New	Delete

5000-100-069-V0

4. Select the "Add New" key. The system displays the User screen.

Note: **** appears to the right of User name after a valid 4-digit User Code has been assigned to a specific User.

Ready To Arm		
Name	03	↶
User 3		
User Code	Z-wave Lock Control No	
		Save

5100-100-075-V0

5. Select the "Name" key The system displays a keyboard.

Note: The Z-wave Lock Control option is only displayed if Z-Wave has been enabled.

USER FUNCTIONS

User Access

Ready To Arm											
123!@#		User3								↶	
Q	W	E	R	T	Y	U	I	O	P		
A	S	D	F	G	H	J	K	L			
Clear	Z	X	C	V	B	N	M	←			
abc...										Done	

5000-100-081-V0

Ready To Arm		
Name	03	↶
Thomas		
User Code	Z-wave Lock Control	
****	Yes	
Z-wave Unlocking Door		
Disarm		
		Save

5100-100-080-V0

Ready To Arm		
Master ****	Babysitter ****	↶
Duress ****	Thomas ****	▲
		▼
Edit	Add New	Delete

5000-100-142-V0

6. If desired you can enter a User Name. Select the "Clear" key and then enter up to 10 characters of text.

Note: Select the "ABC..." key to switch the keyboard between upper/lower case or the "123!@#" key to switch to numbers.

1. Once you are finished, select "Done". The system displays the Keypad screen.

8. Enter the 4-digit code for the new User followed by "Done". The system returns to the Users Programming screen and the new User is displayed and along with **** appears in the User Code field.

9. If a Z-Wave door lock is installed, select the "Z-wave Lock Control" key to enable the User. The system toggles between "No" and "Yes". When "Yes" is selected, the User Code will be synchronized with all enrolled Z-wave door locks allowing the same User Code to be used at the door locks.

Note: The number of User Codes supported by each door lock varies between manufacturers. To ensure compatibility, set the length of the Master User Code on the door lock to be greater than four digits.

10. If "Yes" is selected the system displays the "Z-wave Unlocking Door" key.

11. Select the "Z-wave Unlocking Door" key. The system toggles between "Disabled" and "Disarm". When "Yes" is selected, entering a valid User Code with Z-wave Lock Control enabled at the door lock will disarm the system.


12. Once the User programming is complete select "Save". The system returns to the Users screen and the new User is shown.

Note: **** appears to the right of User name after a valid 4-digit User Code has been assigned to a specific User.


USER FUNCTIONS

User Access


Editing/Deleting a User

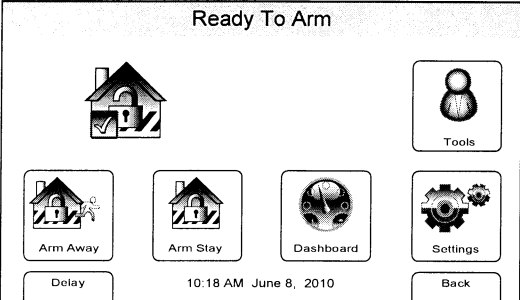


1. With the system in the disarmed state, select the "Tools" icon from the second page of the Home Screen. The system displays the Keypad screen.

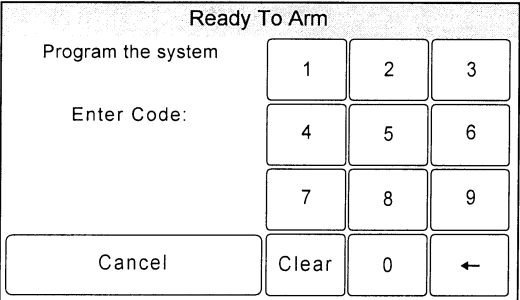

2. Enter your 4-digit Master User Code. The system displays the Master User programming screen.

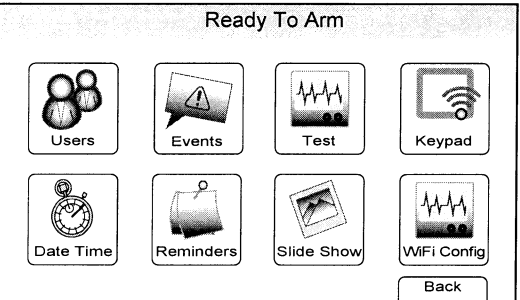

3. Select the "Users" icon. The system displays the Users screen.

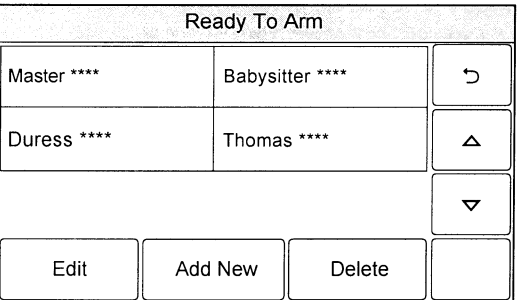

4. Select a User Name and then select "Edit" or "Delete". If you are editing user information proceed to step 5. If you are deleting a user, proceed to step 8.

USER FUNCTIONS

User Access

Ready To Arm										
123!@#		User3							↶	
Q	W	E	R	T	Y	U	I	O	P	
A	S	D	F	G	H	J	K	L		
Clear	Z	X	C	V	B	N	M	←		
abc...									Done	

5000-100-081-V0

Ready To Arm				
Enter Code	1	2	3	↶
	4	5	6	
	7	8	9	
	Clear	0	←	Done

5000-100-185-V0

- If desired you can revise a User Name. Select the "Clear" key and then enter the desired text.
- Once you are finished, select "Done". The system displays the Keypad screen. If you wish to change the assigned User Code, proceed to Step 7 otherwise proceed to Step 9.
- If desired, enter a new 4-digit code for the selected User followed by "Done". The system returns to the Users screen.
- Select "Yes" or "No" when the confirmation screen is displayed then proceed to step 9.
- Select the ↶ icon to return to the Master User screen.