


USER FUNCTIONS


View Events

This feature can be used to view a number of System Events including Arming/Disarming, Zone Activity, Troubles and Alarms.


Viewing System Events

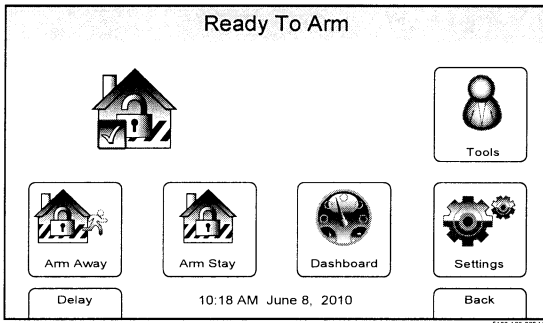

1. With the system in the disarmed state, select the “Tools” icon from the second page of the Home Screen. The system displays the Keypad screen.

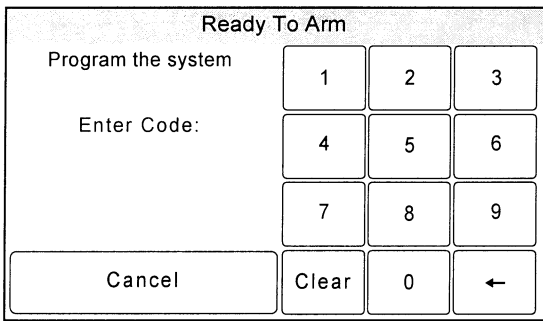

2. Enter your 4-digit Master User Code. The system displays the Master User programming screen.

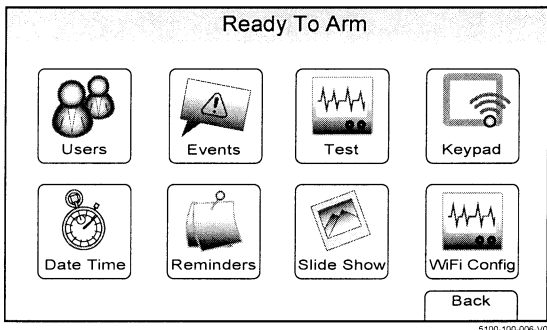

3. Select the “Events” icon. The Events screen will appear and displays all events.

USER FUNCTIONS

View Events

Ready To Arm		
Sun Jun 13, 2010 15:08 Disarmed User 2 E 441	Sat Jun 12, 2010 11:15 Armed Stay User 1 R 441	↶
Sat Jun 12, 2010 11:08 Burglary Bypass Zone 3 E 570	Sat Jun 12, 2010 10:15 Disarmed User 1 E 401	△
Fri Jun 11, 2010 18:08 Armed Away User 2 R 401	Fri Jun 11, 2010 12:10 Disarmed User 3 E 441	▽
Fri Jun 11, 2010 11:08 Armed Stay User 2 R 441	Fri Jun 11, 2010 10:15 Burglary Bypass Zone 3 E 570	All

5000-100-072-V0

Ready To Arm		
All	Alarm	↶
Trouble	Bypass	
Open or Close	Non Security	

5000-100-071-V0

4. If you wish to view specific system history, select "All". The system displays a new menu.

5. Select from the menu to display the specific event types that you wish to view.

Note: Only the event types that were programmed by your installer are available for viewing.