

Date and Time

Viewing the Current Date and Time

The system lets you view its time and date setting on an alpha keypad.

+ [#] + [6] [3]
(Security Code)

OR,
Press the function key (A, B, C, or D) for viewing current date and time, if programmed.

A typical time/date display is shown.
The display will remain on for about 30 seconds or until a key is pressed.

“A” “B” “C” “D”

If one of the above keys has been programmed for the date/time display feature, place a check mark in the box beneath that key.

Alpha Display:

```
****DISARMED****  
READY TO ARM
```

```
TIME/DATE    SAT  
12:05AM_05/09/00
```

Setting the Date and Time

You can set the time and date by doing the following:

1. +[#] + [6] [3]
(Security Code)

2. Press [*] when the time/date is displayed.
A cursor appears under the first digit of the hour.
To move cursor ahead, press []. To go back, press [#].*
- Enter the 2-digit hour setting.
 - Enter the 2-digit minute setting.
 - Press [1] for PM or [0] for AM.
 - Enter the last two digits of the current year.
 - Enter the 2-digit month setting.
 - Enter the 2-digit day setting.
3. To exit, press [*] when cursor is at the last digit, or wait 30 seconds.

Alpha Display:

```
****DISARMED****  
READY TO ARM
```

```
TIME/DATE    SAT  
04:04PM 10/17/00
```

Current time display

```
TIME/DATE    SAT  
04:04P2000/10/17
```

Time/date editing display